

Headquarters

Unitronics (1989) (R"G) Ltd.
Unitronics Building, Airport City
P.O.B. 300, Ben Gurion Airport, Israel 70100
Tel: + 972 (3) 977 8888 Fax: + 972 (3) 977 8877

Replacing a Battery: V230/260/280/290

Tech Support Document

4/06

Before you can replace a battery in a controller comprising a Snap-in I/O module, you must remove it before you can open the controller. Note that replacement batteries, 3V CR2450; may be ordered from Unitronics.



Note that in order to avoid losing data, you replace the battery when the controller is running.

The instructions below feature the V230 for representational purposes, and are relevant for the following Vision models: V230/260/280/290.

Removing a Snap-in I/O Module

- Turn off the power before removing or installing I/O modules.

1. Locate the four buttons on the sides of the controller, two on either side.
2. Press the buttons and hold them down to open the locking mechanism.
3. Gently rock the module from side to side, easing the module from the controller.

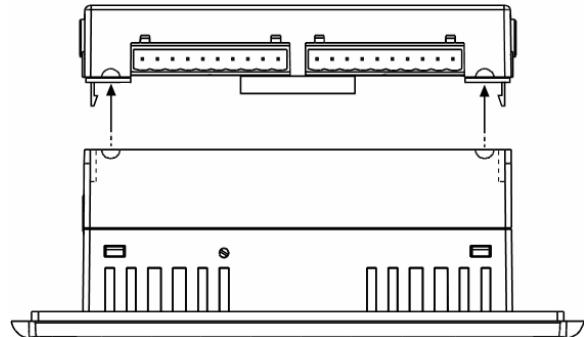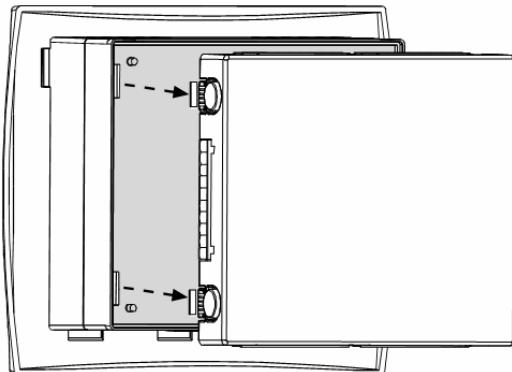

Replacing the Battery




- Before opening the controller, touch a grounded object to discharge any electrostatic charge.
- Avoid directly touching PCB boards.


To preserve data, replace the battery when the controller is running. If you have disconnected the power to remove a Snap-in I/O module, reconnect the power supply cable and power-up the controller before opening it.

Removing the rear panel of controller:

1. Locate the 4 slots on the sides of the controller.
2. Open the controller by inserting a stylus or a flat-bladed screwdriver into the slots located on the side of the controller, then carefully prying off the rear panel.

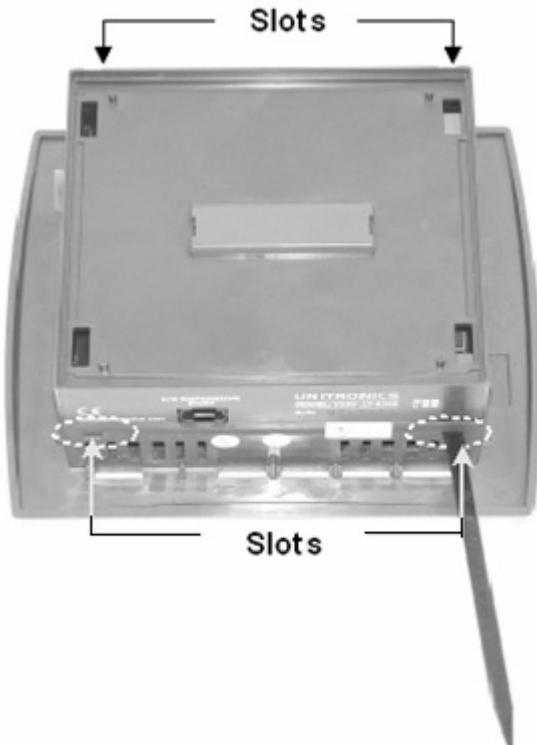


3. Remove the battery by holding it as shown in the accompanying figure, and gently sliding it out from under the clip.

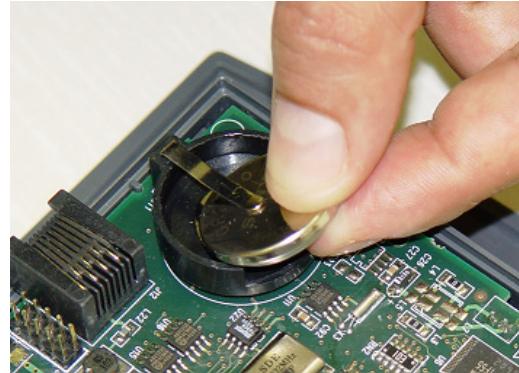

4. Slide the new battery sideways under the clip as shown. The clip must hold the battery securely.

Note that the side of the battery bearing text (+) must face **up**.

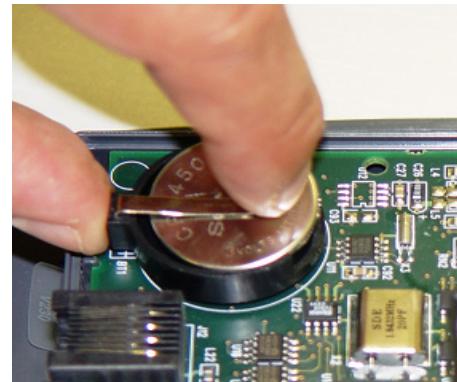


5. Close the controller by snapping the plastic cover back in its place.



Re-installing a Snap-in I/O Module

1. Line the circular guidelines on the controller up with the guidelines on the Snap-in I/O Module as shown below.
2. Apply even pressure on all 4 corners until you hear a distinct ‘click’. The module is now installed. Check that all sides and corners are correctly aligned.

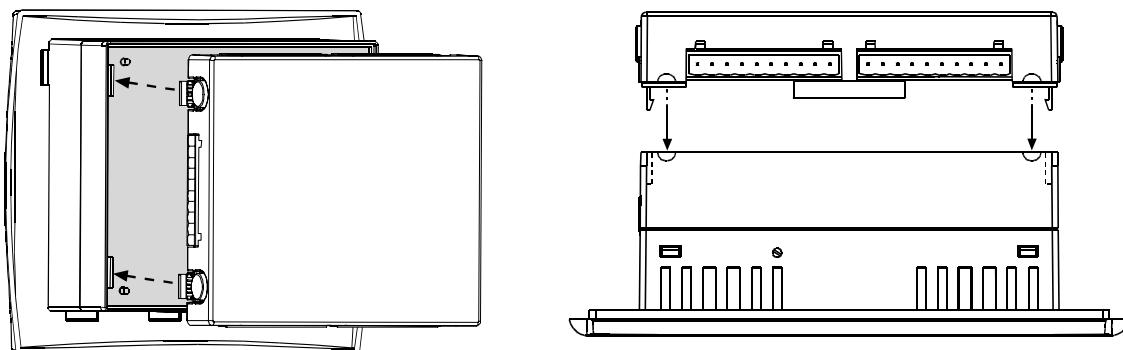

Helsinki
tel. +358 9 540 4940
automation@klinkmann.fi

St. Petersburg
tel. +7 812 327 3752
klinkmann@klinkmann.spb.ru

Moscow
tel. +7 495 641 1616
moscow@klinkmann.spb.ru

Yekaterinburg
tel. +7 343 287 19 19
yekaterinburg@klinkmann.spb.ru

Samara
tel. +7 846 273 95 85
samara@klinkmann.spb.ru

Kiev
tel. +38 044 495 33 40
klinkmann@klinkmann.kiev.ua

KLINKMANN

Riga
tel. +371 6738 1617
klinkmann@klinkmann.lv

Vilnius
tel. +370 5 215 1646
post@klinkmann.lt

Tallinn
tel. +372 668 4500
klinkmann.est@klinkmann.ee

Minsk
tel. +375 17 200 0876
minsk@klinkmann.com